


## Assembling A Raised Garden Bed

### Basic kit

- Place two pieces of 2"x8"x4' (A) with long edges one above another against to a 4"x4"x16" corner brace. Screw two 4" Timberlok per plank on each end.
- Leave 2" overhang for the other end of longer plank (2"x8"x8'/10/12') (B), place another 4"x4" brace and use two 4" Timberlok per plank
- Repeat the same steps until you have a completed rectangle.

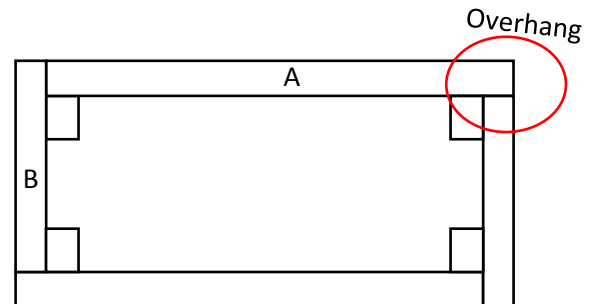

### With top dressed boards kit

- Place the dressed board on the top, implies the same assembling pattern as basic kit
- Use three 3 3/4" Headlok for long planks, two 3 3/4" Headlok screws for shorter lumber

